



30700-D Carter Street, Solon, Ohio 44139, Phone: 440-248-5480

LocBoard™ Mounting Instructions Steel pegboard with Square holes

- ∞ These rugged steel tool boards can be easily and quickly positioned to conform to your storage requirements.
- ∞ Boards can be positioned side by side or above one another in vertical and horizontal mounting positions.
- ∞ Additional boards and hooks can be added to your system as your needs continue to grow.
- ∞ LocBoards™ fasten directly to concrete, solid wood and hollow wall structures without the use of firing strips. (**Mounting hardware not included**)
- ∞ LocBoards™ are designed with internal ribbed support members that not only keep mounting hardware hidden from sight but also add to the board's structural integrity and holding power.

LocBoard™ Installation:

For concrete block installation: You can use either masonry screws or concrete plastic anchors with appropriate sized screws. Head diameter of screw should not exceed .36 (3/16" masonry screws will work.)

For Drywall and plaster installation: Use either self-drilling drywall anchors or normal plastic drywall anchors in addition to #8 screws.


- ∞ Select a wall location for your **LocBoards™** and the desire vertical or horizontal mounting pattern you wish to mount in.
- ∞ There are mounting/internal ribbed support brackets on the back of each **LocBoard™**. Each bracket has 6 pre-punched mount holes that are accessible from the front side of each panel through the square holes.
- ∞ Determine which holes you would like to use for the mounting of your board.
- ∞ Holding panel in-place with mounting brackets/ribbed supports flat against wall and making sure each panel is level and plum. From the front side of your panel mark each holes location you wish to use for mounting using a pencil. Mark at least three holes per bracket to insure proper holding power. (It is not necessary to use all 6 holes when mounting)
- ∞ Once you have marked all desired mount hole locations your ready to install your LocBoard™
- ∞ Pre-drill all holes in accordance to the specifications called out by the manufacture of mounting hardware to be used. (**Mounting Hardware Not Included**)
- ∞ Mounting screws will be installed through the front square opening of each panel. Mounting screw heads should not be visible from the front and should be securely tightened.

Hook Installation: Insert the hook back locking tabs into front openings of tool board. Slide each hook securely into place and install required number of LocScrews (**LocScrews are supplied with each pack of LocHooks**).

Each **LocHook®** has the unique capability of being securely mounted vertical and turned Horizontal.

Panels must be securely fastened to sound wall structures to support heavy loads.

For questions or installation help Contact Triton Products Directly at 877-963-2990
Or by emailing customerservice@tritonproducts.com

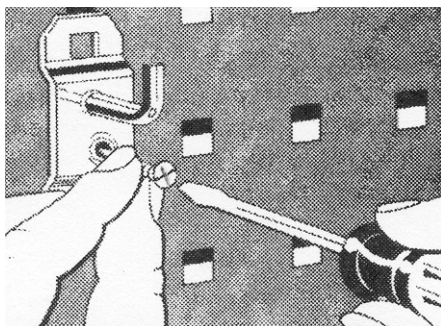

View Tritons full product lineup at www.tritonproducts.com