

**Model # 994 Professional Storage Center**  
(Rev. 04/07)

**Instruction Sheet**

**1. Review Carton Contents:**

- 4 Pcs. Polypropylene Pegboard 22" X 18" X 1/4" Thick
- 44 Pcs. Assortment DuraHook™ Locking Pegboard Hooks
- 4 Pcs. BinClips™ for hanging Plastic Bins
- 4 Pcs. Hanging Plastic Bins
- 60 Pcs. 1/4" Lock Screws for hooks (short screws packaged separately)
- 36 Pcs. #12-2" long mounting screws
- 36 Pcs. #12 plastic wall anchors
- 36 Pcs. Metal wall mounts/spacers

**2. Wall Mounting Instructions:** *(Inventory all components and Read all instructions thoroughly before installing.)*  
Polypropylene pegboards can be mounted to walls in separate locations or side by side.

- A) Determine the location or locations where you want to mount your new storage system. Determine if you want to mount boards (a.) side by side horizontally (b.) above or below one another, or (c.) in different locations from each other.
- B) Using one sheet of the Polypropylene Pegboard (DuraBoard™) determine the height you wish to mount your storage system.
- C) (Using diagram 1-1) Hold one sheet of Polypropylene Pegboard flat against the wall surface, use level to make sure board is level and square. While still holding pegboard flat against wall level and using a pencil, make a circular trace inside of all (8) hole locations using diagram 1-1. (If planning to mount boards in totally separate locations go on to step H)
- D) If you're planning to mount the second pegboard directly to the side or above or below the first: Hold the first pegboard flat against the wall while making sure all 8 traced holes are still aligned with appropriate holes in pegboard. Using a pencil, trace the outer edge of the board you're planning to mount the second board against.
- E) If mounting side by side or above or below one another: use the second board in your kit, align outer edge of second board with outer edge of the pencil mark created in step (D). Do not cover up pencil mark with board. Mark hole locations as called out in step (C).
- F) Using an electric drill with 5/16" drill bit, drill hole locations marked in step (C). Should any hole location fall inline with a wood wall stud, it will not be necessary to pre-drill or use a wall anchor.
- G) Insert plastic wall anchors into holes pre-drilled in step (F.) Wall anchors will be required for all concrete walls.
- H) Using your first pegboard sheet insert all eight (8) #12- 2" wood screws through the pegboard holes specified in diagram 1-2.
- I) Slip steel wall spacers over each screw from the back of the pegboard as shown in diagram 1-3. Flat edge with screw hole should be against the DuraBoard/ Poly Pegboard.
- J) Insert each screw into its pre-installed wall anchor or assigned hole location. Using a #2 Phillips head screwdriver and starting from one of the top corner hole locations insert screws halfway. (This will leave you enough play/flexibility to insert each screw properly.)
- K) Once all 8 wood screws have been installed halfway, tighten all screws down to a point that all spacers are snug against wall surface. **(Always Avoid Over Tightening of Any Screw.)**

Repeat Installation Steps for remaining pegboard panels

**3. Hook Installation: (Using a hand held Phillips head screwdriver)**

- A) Insert hooks panel engaging tab through first hole in pegboard.
- B) Align hooks screw hole with second hole in pegboard.
- C) Secure in place using small Phillips head screws and hand held screwdriver non-powered. (Do not use 2" long wood screws.) Do not over tighten screws used for mounting hooks.


Note: All hooks can be mounted horizontally or vertically to store items and can be combined with one another to create storage solutions for heavier and odd shaped items and tools,

For questions about your DuraBoard™ kit or for installation help, please call Triton Products@ 440-248-5480 Mon- Fri. 8:00 AM to 5:00 PM EST or email [www.customerservice@tritonproducts.com](mailto:www.customerservice@tritonproducts.com).

**Warranty Information:** All products are guaranteed free of defect for the life of the product. Return defective part (s) only, postage pre-paid along with copy of original purchase receipt to:

**Triton Products**  
**30700-D Carter Street**  
**Solon, Ohio 44139**  
**Phone 440-248-5480**  
**Fax 440-248-5483**

**Liability:** Triton Products liability is limited to 100% of the purchase price of the product. Check with your Retailer or Supplier for other great styles of hooks or storage solutions being offered by Triton Products or visit us @ [www.tritonproducts.com](http://www.tritonproducts.com)

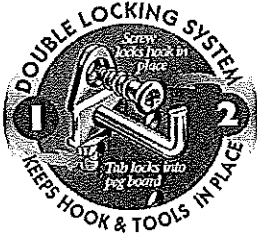

## DuraBoard MOUNTING INSTRUCTIONS

**STEP #4 :** IF MOUNTING DuraBoards SIDE BY SIDE, OR ON TOP OR BOTTOM OF EACH OTHER, HOLD BOARD AGAINST WALL. USE A LEVEL TO KEEP THE BOARD STRAIGHT. TRACE THE OUTSIDE EDGE OF BOARD AT ADJACENT EDGE TO LINE UP 2ND DuraBoard, LINE UP 2ND BOARD AT MARKS ON WALL HOLD BOARD AGAINST WALL & MARK MOUNTING HOLES AS DESCRIBED BELOW

**STEP #1** LEVEL TOP SIDE OF DuraBoard USING A LEVEL

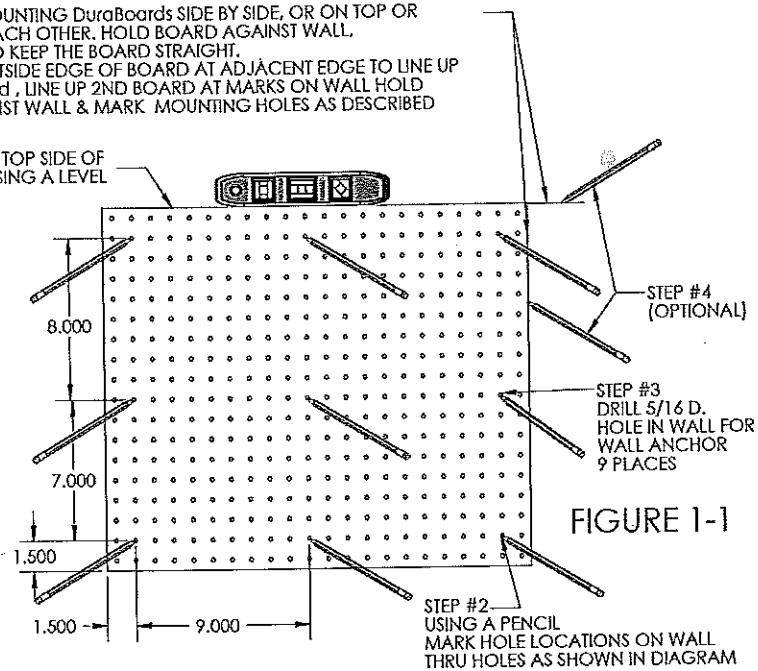


FIGURE 1-1

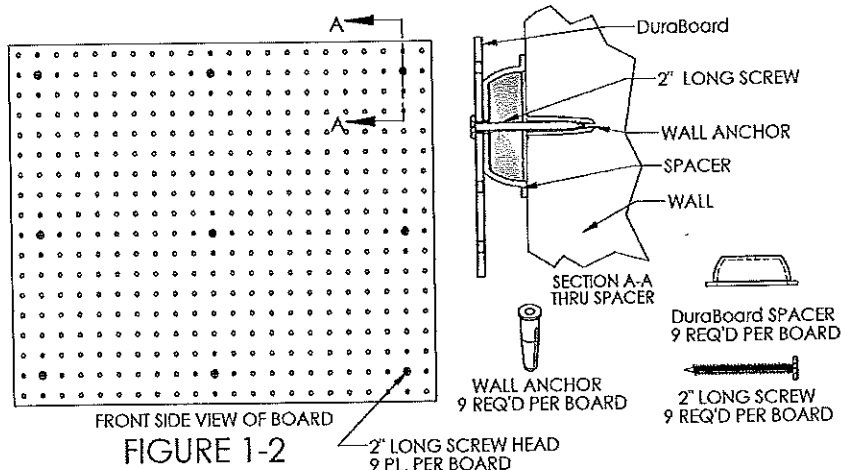


FIGURE 1-2