



STRENGTH IN ORGANIZATION™

Thank you for your purchase!


If you have any problems with your order, please contact us first and we will make it right.

support@tritonproducts.com or call us at 440.248.5480

Checkout our new website! <http://tritonproducts.com>

1700 Storability® Installation Instructions

Package Contents:

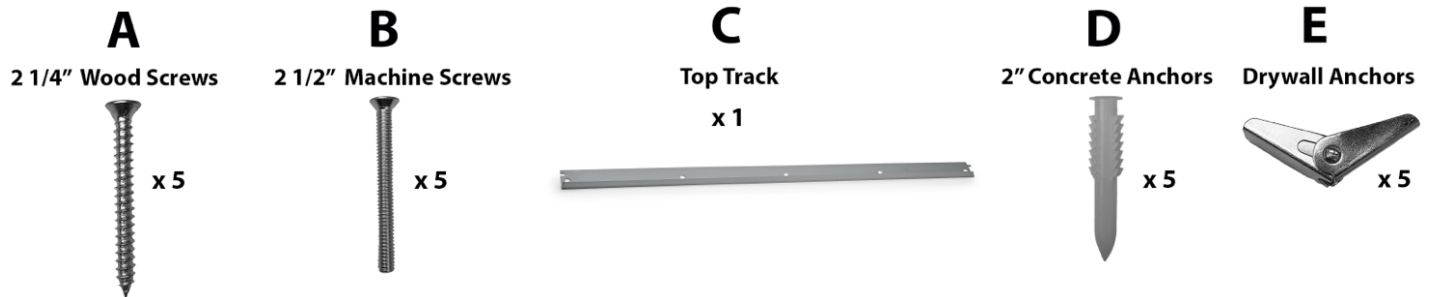

Recommended Tools for Drywall Installation

- Drill
- 1/2" Drill Bit
- 1/8" Drill Bit
- #3 Philips Bit for Drill
- Level
- Pencil
- Stud Finder
- Tape Measure

Recommended Tools for Concrete Installation

- Hammer Drill
- Center Punch
- 5/16" Masonry Drill Bit
- 1/8" Masonry Drill Bit
- #3 Philips Bit for Drill
- Level
- Pencil
- Tape Measure


Step 1. Locate the studs in the desired location for the top track. **Fig. 1** on Page 2 shows you the 3 anchoring scenarios you will have with 16" on center wall construction.

Concrete installation


If you are installing on a concrete wall, you will only use **(A) Screws** with **(D) Anchors** for the entire installation. **Tip:** We highly recommend using a center punch followed by an 1/8" pilot hole before drilling the 5/16" holes for all 5 **(D) Anchors**. This will prevent your masonry bit from walking on the surface of the concrete, resulting in anchors not lining up properly with bracket holes. When drilling, make sure to hold the drill level so anchors fit tight. Continue to follow the instructions for drywall installation.

Fig. 1


Catching 3 Studs

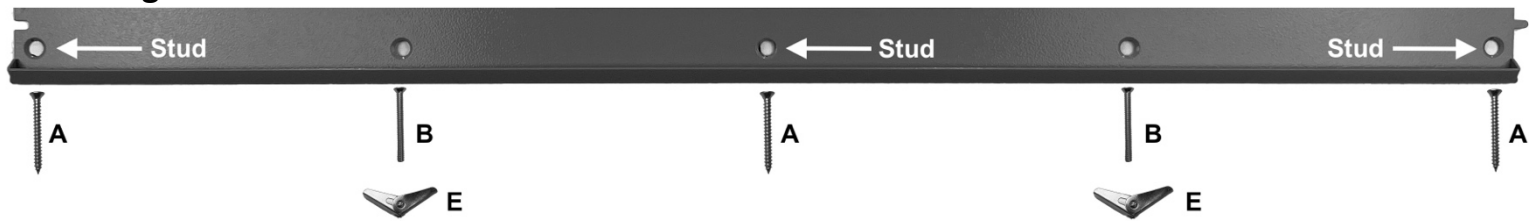

Catching 2 Studs

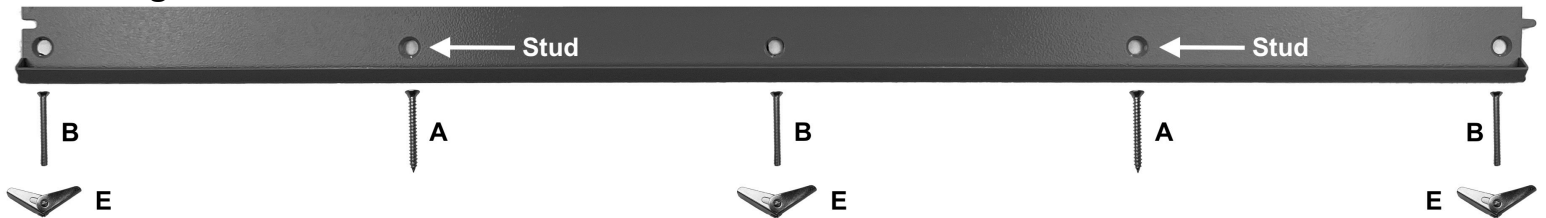

Catching No Studs

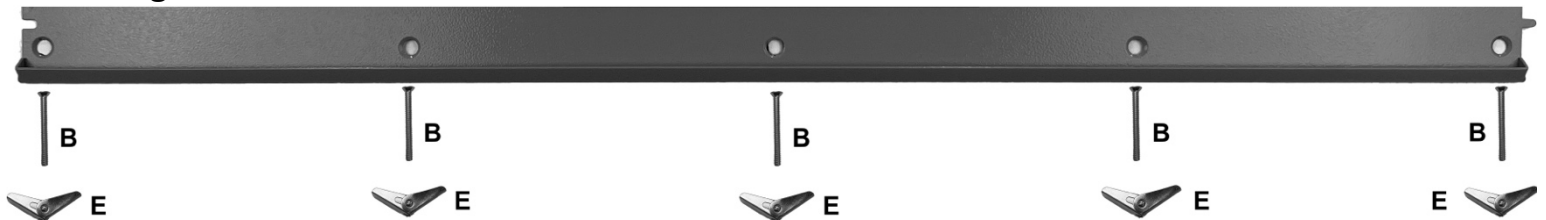

Step 2. Now that you have figured out your anchoring method, place the top track on the wall in the desired location and make sure it is level, now mark all 5 holes on the wall with a pencil.



Step 3. Drill the appropriate holes in all 5 locations. For studs **(A)** drill an 1/8" pilot hole, for anchors **(B & E)** drill a 1/2" hole.

Step 4. Insert **Screws (B)** in the locations of your top track where you will use drywall anchors, now screw on the **drywall anchors (E)** on the end of the screws in the orientation shown in **Fig. 1**. Make sure to run the screw all the way through the anchor bolt so they do not fall off inside the wall.

Step 5. Place the top track on the wall and push the dry wall anchors through the 1/2" holes, now start tightening the screws until the anchors slightly start to tighten up and stop, place your Level back on the top track and finish tightening the anchors. Now that your top track is level and the drywall anchors are tight, screw in the **(A) Screws** in your stud locations.

Congratulations on installing your Storability® 1700!