

LB1-B, T, W - (2) 24" x 24" x 9/16" LocBoard® Pegboards

Read all instructions completely before installing. Should you have any questions about your installation, please call Customer Service at 440-248-5480

- These rugged steel tool boards can be easily and quickly positioned to conform to your storage requirements.
- Boards can be positioned side by side or above one another in vertical and horizontal mounting positions.
- Additional boards and hooks can be added to your system as your needs continue to grow.
- LocBoards fasten directly to concrete, solid wood and hollow wall structures without the use of furring strips. (Mounting hardware not included.)

LocBoard™ Installation:

Hardware need for installation: (NOTE DO NOT USE Tapered Head Screws.)

1. For hollow or concrete block wall: Quantity=12 Each #8- 2" long Phillips pan head machine screws and #8 plastic commercial grade wall anchors. Head diameter size of screws should not exceed .35" in order to fit through square holes in front of boards.
2. For wood stud or wood headers: Use #8-2" long wood screws with Phillips pan heads

Tools needed for Installation:

Level, Marker, 7/32" standard or masonry drill bit, 7/64" std bit for wood studs, #2 Phillips head screw driver, power drill.

1. Select wall location for your LocBoards and the desired vertical or horizontal mounting pattern you wish to mount in. When selecting a location for mounting always make sure that mounting locations do not fall in line with, are adjacent to, or interfere with any internal or external electrical wiring, wall mounted or built-in electrical appliances, heaters, gas lines, ductwork or plumbing inside of wall, or are located on the opposite side of any wall surface from where you are mounting. If you are unsure, please consult a professional before proceeding with installation.
2. (Using Images on Back) There are four screw holes on the back of your LocBoard that are accessible through the square holes on the front.
3. Place 1 LocBoard flat against wall surface. While using a level to make sure your board is straight and squared, looking through the square holes on the front of the board, mark the centers of all 6 screw holes onto your wall surface. Note: Installation for first board should be completed before marking mounting holes for the second board.
4. Pre-drill holes for #8 wall anchors marked in Step 3 using 7/32" standard or masonry drill bit depending on wall surface. If you hit a wood stud stop drilling and using a 7/64" drill bit create a pilot hole for the wood screw Note: Avoid over drilling holes. (Plastic wall anchors should fit snug.)
5. Insert plastic wall anchors in each hole drilled in Step 4 except where you drilled 7/64" pilot hole for wood stud.
6. Align mounting holes in wall surface with screw holes in pegboard. Insert wood screws through the front square opening and into pre-installed plastic wall anchors. Tighten all screws. The head of each screw should not be visible.
7. Repeat Steps 2-6 for second LocBoard installation.


Hook Installation: Insert the hook back locking tabs into front square openings of tool board. Slide each hook securely into place and install required number of LocScrews (LocScrews are supplied with each pack of LocHooks.)

Each LocHook has the unique capability of being securely mounted vertically and horizontally. Panels must be securely fastened to sound wall structures to support heavy loads.

Warranty information: Triton Products warrants to the original owner that this product is free from defects in material and workmanship for a period of two years from the date of the original purchase. If this product is defective when used as intended under normal household conditions within the specified period, Triton will replace the product, send a replacement part or issue a refund (at our option) when the consumer provides a proof of purchase (either a bill of sale, receipted invoice or other proof that the product is within the warranty period), along with a full description of the defect.

Liability: Triton Products and/or its Reseller's liability are limited to 100% of the purchase price of the product.

MOUNTING INSTRUCTIONS LB1-B, T, W

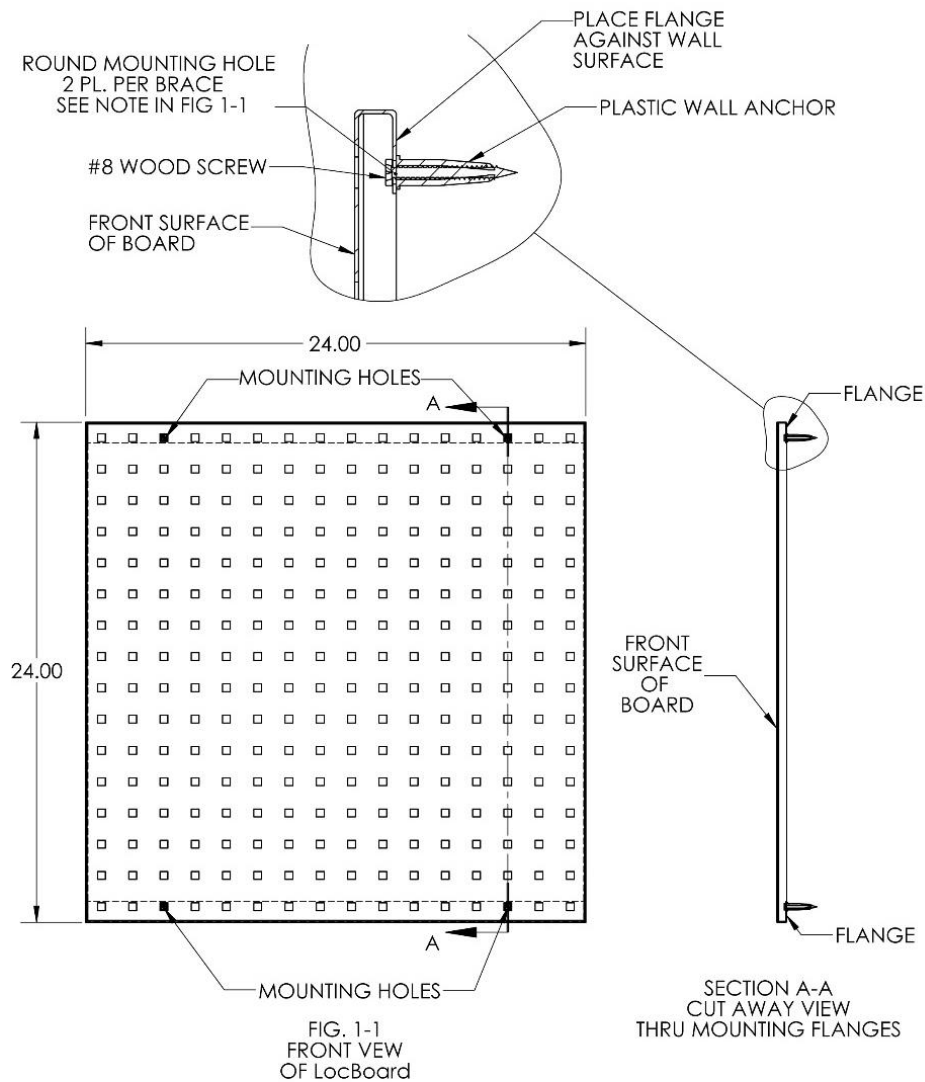

NOTE: USE (2) MOUNTING HOLES PER FLANGE,
(4) PLACES TOTAL

Please contact our Customer Service Division with any questions at:
30700 D Carter Street · Solon, OH 44139 · (P) 440.248.5480 · support@tritonproducts.com

For a full line of products visit www.tritonproducts.com